

■ Master Controls

- POWER : Press to switch on / off the power.
 - VOLUME : For adjusting the volume level.
 - PLAY / II : Press once start to play, press again pause to stop.
 - STOP / EJECT : Press to stop playing and press to disk ejected. Press again to insert CD.
 - MODE : Press to switch to USB, SD or CD mode.
 - SKIP F.WD : Press once, back to the beginning of current track. Press again to desired previous track. Press and hold the button for fast backward.
 - SKIP - PREV : Press to desired next track. Press and hold the button for fast forward.
 - FOLDER : Select folder. Available for playing MP3 format. Press FOLDER ◀ or ▶ to select desired folder.
 - MUTE : Mute function.
 - PROG : To memorize the self-set tracks
 - ◆ Press PROG. LCD display shows “PROGRAM” then use FOLDER and SKIP buttons to select desired track.
 - ◆ Repeat above step to store more tracks.
 - ◆ To play the memory track, press PLAY / PAUSE, LCD DISPLAY shows “MEMORY” and then start to play.
 - ◆ Press PROG again to cancel the program function.
 - USB Connector : Accepts USB.
 - SD Connector : Accepts SD Card and MMC Card.
 - LO : To adjust slow-speed play. Press once, the screen will indicate speed: -1, press one time, it will be -1. It has 10 steps of speed variation.
 - HI : To adjust high speed play. Press once, the screen will indicate speed: 1, press one time, it will be +1. It has 10 steps of speed variation.
 - NOR : Press to back to normal speed.
 - RAN / ENTER : Randomly play and confirmation bottom.
 - ◆ Press to play all songs in a random order. The LCD display shows “RANDOM”.
 - ◆ Press again, LCD display shows “Enter” to confirm the “PROG” function. (pls see “PROG” section for operating program function.)
 - REP / ID3
 - Repeat :
 - ◆ Press once, LCD shows “REPEAT 1”, repeat all tracks.
 - ◆ Press twice : Repeat Folder (For MP3 format).
 - ◆ Press 3rd time : REPEAT ALL : repeat current track.
 - ◆ Press again to cancel Repeating function.
- ID3 : Press ID3 button for 3 seconds, the LCD shows the information such as the title, album, track number, file format . The information to be stored in the file itself.

■ LCD Display

- MP3 : When being MP3 mode, the display panel shows MP3.
- CD : When being CD mode, the display panel shoes CD.
- When in playing mode, it display ▶ , when pausing, the panel shows II .
- When repeatedly playing the single track, it shows REPEAT 1.
- When all songs at the folders are playing repeatedly, it shows REPEAT ALL.
- When it appears REPEAT FOLDER, it refers to playing the tracks repeatedly from a specific folder.
- SHUFFLE : Play in a random mode.
- PROGRAM : When operate program tracks.
- MEMORY : When playback memory tracks.
- A→B : When repeat playing between A and B.
- 88 : Under the MP3 mode, it will appear the folder numbers.
- 888 : Display the current playing track.
- 88:88 : Display the time for the current playing track.
- VOLUME : Turning to adjust & control the desired volume.

■ Note


- This player can accepts 12 cm discs like CD, CD-R, CD-RW , MP3 disks and USB and SD / MMC reader playing, but please do not intend to play the CD-ROM / CD-I / CDV, 8 cm discs or computer CD.
- When inserts the disk into CD player or takes out the disk, it is necessary to let CD player insert disk and return automatically. It is prohibited to push or take out the disk by hand before the disk completely return from CD player, thus will cause the machine to be broken down and unable to operate normally.

■ SD / MMC Card

- Insert SD Card or MMC Card into the insert hole of SD/MMC CARD in the face plate. Pull the card to get stuck with the tenon. It then finished the assembly. When taking out the card, please push the card to the bottom and then release to shout it out. Please don't use the force to pull it out. If so, it will damage the card and the machine.

■ Functions on Remote Controller

- **MODE** : Selection USB, SD or CD. Then press to start playing.
- **EJECT** : Press to stop playing and press to disk ejected gradually.
- **PROG** : To memorize the self-set tracks
 - ◆ Press PROG. LCD display shows “PROGRAM” then use FOLDER and SKIP buttons to select desired track. Press ENTER button to confirm.
 - ◆ Repeat above step to store more tracks.
 - ◆ To play the memory track, press PLAY / PAUSE, LCD DISPLAY shows “MEMORY” and then start to play.
- **RAN** : Press to select in random order. Press again to cancel random playing function.
- **REPEAT** : Repeat mode
 - ◆ Press once, LCD shows “REPEAT 1”, repeat all tracks.
 - ◆ Press twice : Repeat Folder (For MP3 format).
 - ◆ Press 3rd time : REPEAT ALL : repeat current track.
 - ◆ Press again to cancel Repeating function.
- **Numeral 0 ~ 9** : Select numerals. Selects the track from numerals.
- **FOLDER** : To select desired folder. Press FOLDER button , each press will go to next folder.
- : **PLAY / PAUSE**. Press play or pause playing.
- : **Stop to play**
- : Press to fast forward.
- : Press to fast backward.
- : Press to next track.
- : Press to previous track.
- **A-B** : It is the zone memory function. During Playing, press **A-B** A point will start to memorize.
Press **A-B** again to memorize B point, and start repeating playing point A - B Memory Zone.
Press again to cancel A → B Function.
- : **ON / OFF Mute**.
- : **ENTER**.
- **Speed** - To adjust SLOW / HIGH / NORMAL speed play.
Press **HIGH** to to adjust high speed play.
Press **LOW** to adjust slow-speed play.
The unit offers 10 bands of speed variation. Press **NOR** Back to normal play.
- **ID3** : Press ID3 button for 3 seconds, the LCD shows the information such as the title, album, track number, file format . The information to be stored in the file itself.

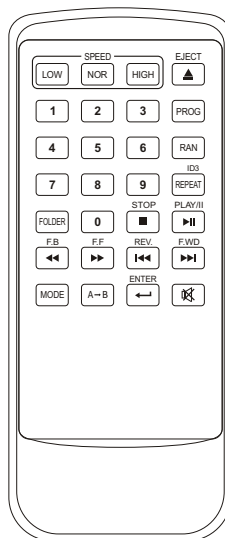

- When using the remote controller, the remote controller shall be appointed to the receiving hole of face plate. The optimal receiving distance is 3 meters. (the available distance is 5 meters.) The batteries (model CR2025 3V) shall be put into the remote controller.

