


Illustration




- 1. LCD window
- 2. Previous track / volume down
(works during playback)
- 3. Next track / volume up
(works during playback)
- 4. Stop
- 5. Play / Pause
- 6. SD/MMC port
- 7. USB port
- 8. Repeat / Folder select
- 9. Power
- 10. Volume down (MUTE when in minimum level)
- 11. Volume up
- 12. Mute
- 13. Folder select

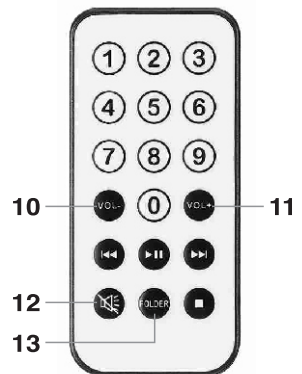

remote control

※ Specifications are subject to change without prior notice.

■ Instruction

1. Press and hold (9) for 1 second to turn this player on. Press and hold (9) for 1 second to turn it off.
2. Press (2) to play previous audio track; press (3) to play next audio track. Press (4) to stop any playback.
3. Press (5) to Play or to Pause any audio track.
4. When both SD card and USB are installed, USB has higher priority to be readout.
5. Do not pull SD card out directly or it might be damaged. Just push it a bit forward and it will be ejected.
6. Repeat / Folder Select:
 - a. There are 3 modes for repeat during audio playback.
 -  : To repeat a track.
 -  : To repeat all tracks in all album.
 -  : To repeat all tracks in a single album.
 - b. When not in playback, press (8) to select a desired folder/album with NEXT, PREV buttons. Finally press PLAY to end the setting.
7. During playback, press VOL+ to increase volume; press VOL- to decrease volume.